

PRO1SHL

Key #	Description	Order ID #		Key #	Description	Order ID #
Key #	Description	Order ID #		61	TENSION WASHER	DY-100073011
1	FRAME	DY-105290010		62	SPOOL SPACER-B	DY-100074011
2	CLUTCH BAR PLATE-R	DY-104859010		63	LOCKING PIN	DY-105303010
3	CLUTCH BAR PLATE-L	DY-104860010		65	LOCKING PIN SPRING	DY-102665010
4	CLUTCH BAR ASSEMBLY	DY-102883060		66	GEAR SIDE COVER SCREW-A	DY-100683010
6	CLUTCH BAR SCREW	DY-104739010		67	GEAR SIDE COVER SCREW-B	DY-104086010
7	LEVEL WIND ASSEMBLY	DY-105289010		68	GEAR SIDE COVER SCREW-C	DY-101507010
8	PIPE	DY-102112010		69	LUBE PORT CAP	DY-101698440
9	WORM SHAFT	DY-102113020		70	LUBE PORT CAP SCREW	DY-101507010
10	BALL BEARING	DY-104544010		71	DRAG SPRING WASHER	DY-100088010
12	IDLER-S	DY-100019010		72	CLICK HOLDER	DY-101765010
13	WORM SHAFT PIN	DY-100020010		73X	STAR DRAG COMPLETE	DY-U04139140
15	WORM SHAFT BUSHING-B	DY-104642010		74	CLICKER	DY-101763010
16	WORM SHAFT WASHER	DY-100539020		75	CLICK PLATE	DY-101764010
17	E-RING	DY-100047010		76	CLICK PLATE RETAINER	DY-101766011
18	PILLAR	DY-103775010		77	HANDLE WASHER	DY-100933010
19	LEVEL WIND PIN	DY-100464011		78X	HANDLE COMPLETE	DY-104037070
20	SPACER(OPTIONAL)	DY-100025020		79	BALL BEARING	DY-104543010
21	LEVEL WIND NUT	DY-100288021		80	HANDLE KNOB COMPLETE	DY-105020010
22	FRONT COVER	DY-105293010		81	BALL BEARING	DY-104543010
23	FRONT COVER SCREW	DY-100152010		82	HANDLE KNOB SCREW	DY-100180010
24	BALL BEARING	DY-104542010		83	HANDLE KNOB CAP	DY-105023010
25	CRANK SHAFT	DY-105300010		85	HANDLE NUT	DY-104096040
27	IDLER-L	DY-101938020		86	HANDLE NUT RETAINER	DY-103642160
28	IDLER-L WASHER-B	DY-100647050		87	SCREW	DY-101202020
29	BEARING PLATE	DY-104413020		88X	SPOOL COMPLETE	DY-105306010
30	E-RING	DY-100047010		89	BALL BEARING	DY-100156010
31	BEARING PLATE SCREW	DY-100028070		90	PIN	DY-104399010
33	CLUTCH CAM	DY-105294010		91	BRAKE HOLDER	DY-103670010
34	CLUTCH SPRING	DY-102690010		92	BRAKE SHOE ASSEMBLY	DY-103272010
35	KICK LEVER	DY-102308010		94	BRAKE HOLDER PLATE	DY-103671010
36	KICK LEVER SPRING	DY-104146010		95	BRAKE HOLDER PLATE SCREW	DY-100526010
37	CAM PLATE	DY-104364010		96X	PALM SIDE PLATE ASSEMBLY	DY-U05296010
38	CAM PLATE SCREW	DY-101177050		98	CONTROL DIAL	DY-102917320
39	PINION YOKE	DY-102083010		99	SPOOL COVER	DY-103727010
40	PINION GEAR	DY-104372010		105	SPOOL COVER SCREW	DY-100141010
41	PINION YOKE SPRING	DY-102465010		107	BALL BEARING	DY-100155010
42	RATCHET	DY-101407010		108	BEARING RETAINER	DY-102976010
43	RATCHET WASHER	DY-103772010		111	DRAG SPRING WASHER	DY-101205010
44	DRIVE GEAR	DY-104598020		118	CLUTCH SCREW	DY-103013020
45	DRAG WASHER-L	DY-102377010		120	BRAKE PLATE HOLDER ASSEMBLY	DY-103274010
46	DRAG WASHER-D1	DY-104197010		121	SLIDE CAM SPRING	DY-102665010
47	DRAG WASHER-A	DY-104127010		122	SLIDE CAM-H	DY-102395010
48	DRAG WASHER-D2	DY-104122010		123	SLIDE CAM SCREW	DY-100526020
49	SLEEVE WASHER(OPTIONAL)	DY-100086060		124	SLIDE CAM-D	DY-102394010
50	SLEEVE	DY-104537010		125	CLICK SPRING	DY-102002010
51X	GEAR SIDE PLATE ASSEMBLY	DY-U05295020		127	LINK PLATE	DY-102894010
53	ONE WAY CLUTCH	DY-104088010		128	LINK PLATE SCREW	DY-103014010
54	O-RING	DY-100209020		133	HOOK HOLDER	DY-102943020
55	BALL BEARING	DY-102381010		134	HOOK HOLDER WASHER	DY-101168020
56	BEARING RETAINER	DY-104461010		135	HOOK HOLDER SCREW	DY-100246030
57X	CAST CONTROL CAP ASSEMBLY	DY-U03164220		136	HOOK HOLDER SPRING	DY-102969011
58	CLICKER	DY-101674011		155	BUSH	DY-104365010
59	CLICK PLATE	DY-101675011		166	WASHER (G/METAL E-RING-BALL BEAR	DY-100646010
60	CLICK PLATE RETAINER	DY-101543012				