

PRO1HL

Key #	Description	Order ID #		Key #	Description	Order ID #
1	FRAME	DY-105290010		61	TENSION WASHER	DY-100073011
2	CLUTCH BAR PLATE-R	DY-104859010		62	SPOOL SPACER-B	DY-100074011
3	CLUTCH BAR PLATE-L	DY-104860010		63	LOCKING PIN	DY-105303010
4	CLUTCH BAR ASSEMBLY	DY-102883060		65	LOCKING PIN SPRING	DY-102665010
6	CLUTCH BAR SCREW	DY-104739010		66	GEAR SIDE COVER SCREW-A	DY-100683010
7	LEVEL WIND ASSEMBLY	DY-105289010		67	GEAR SIDE COVER SCREW-B	DY-104086010
8	PIPE	DY-102112010		68	GEAR SIDE COVER SCREW-C	DY-101507010
9	WORM SHAFT	DY-102113020		69	LUBE PORT CAP	DY-101698440
10	BALL BEARING	DY-104544010		70	LUBE PORT CAP SCREW	DY-101507010
12	IDLER-S	DY-100019010		71	DRAG SPRING WASHER	DY-100088010
13	WORM SHAFT PIN	DY-100020010		72	CLICK HOLDER	DY-101765010
15	WORM SHAFT BUSHING-B	DY-104642010		73X	STAR DRAG COMPLETE	DY-U04139140
16	WORM SHAFT WASHER	DY-100539020		74	CLICKER	DY-101763010
17	E-RING	DY-100047010		75	CLICK PLATE	DY-101764010
18	PILLAR	DY-103775010		76	CLICK PLATE RETAINER	DY-101766011
19	LEVEL WIND PIN	DY-100464011		77	HANDLE WASHER	DY-100933010
20	SPACER(OPTIONAL)	DY-100025020		78X	HANDLE COMPLETE	DY-104037070
21	LEVEL WIND NUT	DY-100288021		79	BALL BEARING	DY-104543010
22	FRONT COVER	DY-105293010		80	HANDLE KNOB COMPLETE	DY-105020010
23	FRONT COVER SCREW	DY-100152010		81	BALL BEARING	DY-104543010
24	BALL BEARING	DY-104542010		82	HANDLE KNOB SCREW	DY-100180010
25	CRANK SHAFT	DY-105300010		83	HANDLE KNOB CAP	DY-105023010
27	IDLER-L	DY-101938020		85	HANDLE NUT	DY-104096040
28	IDLER-L WASHER-B	DY-100647050		86	HANDLE NUT RETAINER	DY-103642160
29	BEARING PLATE	DY-104413020		87	SCREW	DY-101202020
30	E-RING	DY-100047010		88X	SPOOL COMPLETE	DY-105306010
31	BEARING PLATE SCREW	DY-100028070		89	BALL BEARING	DY-100156010
33	CLUTCH CAM	DY-105294010		90	PIN	DY-104399010
34	CLUTCH SPRING	DY-102690010		91	BRAKE HOLDER	DY-103670010
35	KICK LEVER	DY-102308010		92	BRAKE SHOE ASSEMBLY	DY-103272010
36	KICK LEVER SPRING	DY-104146010		94	BRAKE HOLDER PLATE	DY-103671010
37	CAM PLATE	DY-104364010		95	BRAKE HOLDER PLATE SCREW	DY-100526010
38	CAM PLATE SCREW	DY-101177050		96X	PALM SIDE PLATE ASSEMBLY	DY-U05296010
39	PINION YOKE	DY-102083010		98	CONTROL DIAL	DY-102917320
40	PINION GEAR	DY-105108010		99	SPOOL COVER	DY-103727010
41	PINION YOKE SPRING	DY-102465010		105	SPOOL COVER SCREW	DY-100141010
42	RATCHET	DY-101407010		107	BALL BEARING	DY-100155010
43	RATCHET WASHER	DY-103772010		108	BEARING RETAINER	DY-102976010
44	DRIVE GEAR	DY-105302020		111	DRAG SPRING WASHER	DY-101205010
45	DRAG WASHER-L	DY-102377010		118	CLUTCH SCREW	DY-103013020
46	DRAG WASHER-D1	DY-104197010		120	BRAKE PLATE HOLDER ASSEMBLY	DY-103274010
47	DRAG WASHER-A	DY-104127010		121	SLIDE CAM SPRING	DY-102665010
48	DRAG WASHER-D2	DY-104122010		122	SLIDE CAM-H	DY-102395010
49	SLEEVE WASHER(OPTIONAL)	DY-100086060		123	SLIDE CAM SCREW	DY-100526020
50	SLEEVE	DY-104537010		124	SLIDE CAM-D	DY-102394010
51X	GEAR SIDE PLATE ASSEMBLY	DY-U05295010		125	CLICK SPRING	DY-102002010
53	ONE WAY CLUTCH	DY-104088010		127	LINK PLATE	DY-102894010
54	O-RING	DY-100209020		128	LINK PLATE SCREW	DY-103014010
55	BALL BEARING	DY-102381010		133	HOOK HOLDER	DY-102943020
56	BEARING RETAINER	DY-104461010		134	HOOK HOLDER WASHER	DY-101168020
57X	CAST CONTROL CAP ASSEMBLY	DY-U03164220		135	HOOK HOLDER SCREW	DY-100246030
58	CLICKER	DY-101674011		136	HOOK HOLDER SPRING	DY-102969011
59	CLICK PLATE	DY-101675011		155	BUSH	DY-104365010
60	CLICK PLATE RETAINER	DY-101543012		166	WASHER (G/METAL E-RING-BALL BEARING)	DY-100646010