

## SD1XHF

Key #	Description	Order ID #	Key #	Description	Order ID #
1	FRAME	DY-104350120	61	TENSION WASHER	DY-100073011
2	CLUTCH BAR PLATE-R	DY-102881010	62	SPOOL SPACER-B	DY-100074011
3	CLUTCH BAR PLATE-L	DY-102882010	63	LOCKING PIN	DY-102903070
4	CLUTCH BAR ASSEMBLY	DY-102883090	64	E-RING	DY-100621010
6	CLUTCH BAR SCREW	DY-104739010	65	LOCKING PIN SPRING	DY-101308010
7	LEVEL WIND ASSEMBLY	DY-103715030	66	GEAR SIDE COVER SCREW-A	DY-100035020
8	PIPE	DY-101406010	67	GEAR SIDE COVER SCREW-B	DY-100028020
9	WORM SHAFT	DY-100017013	69	LUBE PORT CAP	DY-101698010
10	BALL BEARING	DY-102954010	70	LUBE PORT CAP SCREW	DY-101507010
12	IDLER-S	DY-100019010	71	DRAG SPRING WASHER	DY-100088010
13	WORM SHAFT PIN	DY-100020010	72	CLICK HOLDER	DY-101765010
15	WORM SHAFT BUSHING-B	DY-102438010	73	STAR DRAG ASSEMBLY	DY-102931701
16	WORM SHAFT WASHER	DY-100539030	73X	STAR DRAG COMPLETE	DY-U02932392
17	E-RING	DY-100047010	74	CLICKER	DY-101763010
18	PILLAR	DY-104359010	75	CLICK PLATE	DY-101764010
19	LEVEL WIND PIN	DY-100464011	76	CLICK PLATE RETAINER	DY-101766011
20	SPACER(OPTIONAL)	DY-100025020	77	HANDLE WASHER	DY-100933010
21	LEVEL WIND NUT	DY-100288021	78	HANDLE	DY-U03814011
22	FRONT COVER	DY-104353070	78X	HANDLE COMPLETE	DY-103813010
23	FRONT COVER SCREW	DY-103235020	79	BALL BEARING	DY-104542010
25	CRANK SHAFT	DY-103136011	80	HANDLE KNOB	DY-103807010
26	IDLER-L WASHER-A	DY-100647050	81	BALL BEARING	DY-104542010
27	IDLER-L	DY-101938020	82	HANDLE KNOB SCREW	DY-100180010
28	IDLER-L WASHER-B	DY-100646010	83	HANDLE KNOB CAP	DY-100181080
29	BEARING PLATE	DY-104411010	85	HANDLE NUT	DY-104094010
30	E-RING	DY-100047010	86	HANDLE NUT RETAINER	DY-103642020
31	BEARING PLATE SCREW	DY-100028070	87	SCREW	DY-101202020
33	CLUTCH CAM	DY-102893010	88	SPOOL	DY-U04381020
34	CLUTCH SPRING	DY-104846010	88X	SPOOL COMPLETE	DY-104380020
35	KICK LEVER	DY-102307011	89	BALL BEARING	DY-100156010
36	KICK LEVER SPRING	DY-104137010	90	PIN	DY-104399010
37	CAM PLATE	DY-104354010	96	PALM SIDE PLATE	DY-104406100
38	CAM PLATE SCREW	DY-101177050	96X	PALM SIDE PLATE ASSEMBLY	DY-U04352020
39	PINION YOKE	DY-102073010	98	CONTROL DIAL	DY-102917160
40	PINION GEAR	DY-104369010	99	SPOOL COVER	DY-104305010
41	PINION YOKE SPRING	DY-102465010	100	MAGNET HOLDER-D	DY-102922010
42	RATCHET	DY-100818010	105	SPOOL COVER SCREW	DY-100141010
43	RATCHET WASHER	DY-103772010	106	SPOOL SPACER-A	DY-101850010
44	DRIVE GEAR	DY-102872010	107	BALL BEARING	DY-100155010
45	DRAG WASHER-L	DY-102377011	108	BEARING RETAINER	DY-102976010
46	DRAG WASHER-D1	DY-100057020	116	CAM PLATE SCREW	DY-103013020
47	DRAG WASHER-A	DY-100985010	121	SLIDE CAM SPRING	DY-102665010
48	DRAG WASHER-D2	DY-100986011	122	SLIDE CAM-M	DY-103583010
50	SLEEVE	DY-104537010	123	SLIDE CAM SCREW	DY-100526020
51	GEAR SIDE PLATE	DY-104971030	124	SLIDE CAM-D	DY-102394010
51X	GEAR SIDE PLATE ASSEMBLY	DY-U04972030	125	CLICK SPRING	DY-102002010
53	ONE WAY CLUTCH	DY-104088010	126	SPOOL COVER SPACER(OPTIONAL)	DY-102635020
54	O-RING	DY-103165010	127	LINK PLATE	DY-102894010
55	BALL BEARING	DY-102381010	128	LINK PLATE SCREW	DY-103014010
56	BEARING RETAINER	DY-104461010	133	HOOK HOLDER	DY-102898020
57	CAST CONTROL CAP	DY-102254061	134	HOOK HOLDER WASHER	DY-101168020
57X	CAST CONTROL CAP ASSEMBLY	DY-U02254061	135	HOOK HOLDER SCREW	DY-100246030
58	CLICKER	DY-101674011	136	HOOK HOLDER SPRING	DY-102968011
59	CLICK PLATE	DY-101675011	153	FLIPPING LEVER PIN	DY-104899010
60	CLICK PLATE RETAINER	DY-101543012	154	FLIPPING LEVER	DY-103803010
60	CLICK PLATE RETAINER	DY-101543012	155	BUSH	DY-104365010