

CISHL

Key #	Description	Order ID #		Key #	Description	Order ID #
1	FRAME	DY-103549060		67	GEAR SIDE COVER SCREW-B	DY-100035030
2	CLUTCH BAR PLATE-R	DY-102881010		69	LUBE PORT CAP	DY-101698150
3	CLUTCH BAR PLATE-L	DY-102882010		70	LUBE PORT CAP SCREW	DY-101507030
4	CLUTCH BAR ASSEMBLY	DY-102883090		71	DRAG SPRING WASHER	DY-100088010
6	CLUTCH BAR SCREW	DY-101507030		72	CLICK HOLDER	DY-101765010
7	LEVEL WIND ASSEMBLY	DY-103522010		73	STAR DRAG ASSEMBLY	DY-102946450
8	PIPE	DY-103286010		73X	STAR DRAG COMPLETE	DY-U02947442
9	WORM SHAFT	DY-103474010		74	CLICK LEAF SPRING	DY-101763010
10	BALL BEARING	DY-102954010		75	CLICK PLATE-B	DY-101764010
11	WORM SHAFT BUSHING-A	DY-102438010		76	CLICK PLATE RETAINER	DY-101766011
12	IDLER-S	DY-100019010		77	HANDLE WASHER	DY-100933010
13	WORM SHAFT PIN	DY-100020010		78	HANDLE	DY-U01807031
16	WORM SHAFT WASHER	DY-100539010		78X	HANDLE COMPLETE	DY-101806290
17	E-RING	DY-100047010		79	BALL BEARING	DY-102950010
18	PILLAR	DY-102711010		80	HANDLE KNOB	DY-103630050
19	LEVEL WIND PIN	DY-100464011		81	BALL BEARING	DY-102950010
20	SPACER(OPTIONAL)	DY-100025010		82	HANDLE KNOB SCREW	DY-100180010
21	LEVEL WIND NUT	DY-100288021		83	HANDLE KNOB CAP	DY-102309051
22	FRONT COVER	DY-103550011		85	HANDLE NUT	DY-101176020
23	FRONT COVER SCREW	DY-100152010		86	HANDLE NUT RETAINER	DY-103642080
24	BALL BEARING	DY-102952010		87	SCREW	DY-101202020
25	CRANK SHAFT	DY-101493020		88	SPOOL	DY-U03959010
26	IDLER-L WASHER-A	DY-100548010		88X	SPOOL COMPLETE	DY-103958010
27	IDLER-L	DY-101938020		89	BALL BEARING	DY-101616010
28	IDLER-L WASHER-B	DY-100045020		90	PIN	DY-100120010
29	BEARING PLATE	DY-102944010		91	BRAKE HOLDER	DY-103532010
30	E-RING	DY-100047010		92	BRAKE SHOE	DY-100522010
31	BEARING PLATE SCREW	DY-100028070		93	BRAKE SHOE SPRING	DY-100525010
33	CLUTCH CAM	DY-103551010		94	MAGNET PLATE	DY-103533023
34	CLUTCH SPRING	DY-102690010		95	MAGNET PLATE SCREW	DY-100526010
35	KICK LEVER	DY-102308011		96	PALM SIDE PLATE	DY-A03556071
36	KICK LEVER SPRING	DY-102058010		96X	PALM SIDE PLATE ASSEMBLY	DY-UA3556071
37	CAM PLATE	DY-103552010		98	CONTROL DIAL	DY-102917010
38	CAM PLATE SCREW	DY-101177050		99	SPOOL COVER ASSEMBLY	DY-U03537010
39	PINION YOKE	DY-102165010		100	MAGNET HOLDER ASSEMBLY	DY-U03539010
40	PINION GEAR	DY-102958010		105	SPOOL COVER SCREW	DY-100141010
41	PINION YOKE SPRING	DY-102465010		106	SPOOL SPACER-A	DY-101850010
42	RATCHET	DY-101407010		107	BALL BEARING	DY-102380010
43	RATCHET WASHER	DY-103772010		108	BEARING RETAINER	DY-102976010
44	DRIVE GEAR	DY-102965010		114	WASHER(OPTIONAL)	DY-100073011
45	DRAG WASHER-L	DY-102377010		117	CLUTCH WASHER	DY-100539030
46	DRAG WASHER-D1	DY-100057020		118	CLUTCH SCREW	DY-103013020
47	DRAG WASHER-A	DY-100985010		121	SLIDE CAM SPRING	DY-102665010
48	DRAG WASHER-D2	DY-100986011		122	SLIDE CAM-H	DY-103342010
49	SLEEVE WASHER(OPTIONAL)	DY-100144050		123	SLIDE CAM SCREW	DY-100526020
50	SLEEVE	DY-101983020		124	SLIDE CAM-D	DY-102394010
51	GEAR SIDE PLATE	DY-103553121		125	CLICK SPRING	DY-102002010
51X	GEAR SIDE PLATE ASSEMBLY	DY-U03554121		127	LINK PLATE	DY-102894010
53	ONE WAY CLUTCH	DY-102090010		128	LINK PLATE SCREW	DY-103014010
54	O-RING	DY-100209020		133	HOOK HOLDER	DY-102943010
55	BALL BEARING	DY-102380010		134	HOOK HOLDER WASHER	DY-101168020
56	BEARING RETAINER	DY-101588011		135	HOOK HOLDER SCREW	DY-100246030
57	CAST CONTROL CAP	DY-103164140		136	HOOK HOLDER SPRING	DY-102968010
57X	CAST CONTROL CAP ASSEMBLY	DY-U03164140		141	HOOD	DY-103521080
58	CLICKER	DY-101674011		142	HOOD SCREW	DY-101177060
59	CLICK PLATE	DY-101675011		143	FRONT COVER SCREW-B	DY-101177060
60	CLICK PLATE RETAINER	DY-101543012		144	LOCK LEVER	DY-103557011
61	TENSION WASHER	DY-100073011		147	GUIDE PIN	DY-103288020
62	SPOOL SPACER-B	DY-100074021		148	WASHER(OPTIONAL)	DY-103567010
66	GEAR SIDE COVER SCREW-A	DY-101177010		149	SLIDE PLATE	DY-104041010
				150	SLIDE PLATE SCREW	DY-101177060
				151	LOCK LEVER SPRING	DY-104101010