

## TLT1SH

Key #	Description	Order ID #	Key #	Description	Order ID #
1	FRAME	DY-104350160	61	TENSION WASHER	DY-100073011
2	CLUTCH BAR PLATE-R	DY-102881010	62	SPOOL SPACER-B	DY-100074021
3	CLUTCH BAR PLATE-L	DY-102882010	63	LOCKING PIN	DY-102903070
4	CLUTCH BAR ASSEMBLY	DY-102883090	64	E-RING	DY-100621010
6	CLUTCH BAR SCREW	DY-104739010	65	LOCKING PIN SPRING	DY-101308010
7	LEVEL WIND ASSEMBLY	DY-103715010	66	GEAR SIDE COVER SCREW-A	DY-100035020
8	PIPE	DY-101406010	67	GEAR SIDE COVER SCREW-B	DY-100028020
9	WORM SHAFT	DY-100226010	69	LUBE PORT CAP	DY-101698080
10	BALL BEARING	DY-104544010	70	LUBE PORT CAP SCREW	DY-101507010
12	IDLER-S	DY-100019010	71	DRAG SPRING WASHER	DY-100088010
13	WORM SHAFT PIN	DY-100020010	72	CLICK HOLDER	DY-101765010
15	WORM SHAFT BUSHING-B	DY-102438010	73	STAR DRAG ASSEMBLY	DY-102931881
16	WORM SHAFT WASHER	DY-100539030	73X	STAR DRAG COMPLETE	DY-U02932872
17	E-RING	DY-100047010	74	CLICKER	DY-101763010
18	PILLAR	DY-104359020	75	CLICK PLATE	DY-101764010
19	LEVEL WIND PIN	DY-100464011	76	CLICK PLATE RETAINER	DY-101766011
20	SPACER(OPTIONAL)	DY-100025020	77	HANDLE WASHER	DY-100933010
21	LEVEL WIND NUT	DY-100288021	78	HANDLE	DY-U04105011
22	FRONT COVER	DY-104353100	78X	HANDLE COMPLETE	DY-104104070
23	FRONT COVER SCREW	DY-103235020	79	BALL BEARING	DY-104543010
24	BALL BEARING	DY-104542010	80	HANDLE KNOB	DY-103069140
25	CRANK SHAFT	DY-105264010	81	BALL BEARING	DY-104543010
26	IDLER-L WASHER-A	DY-100647050	82	HANDLE KNOB SCREW	DY-100180010
27	IDLER-L	DY-101938020	83	HANDLE KNOB CAP	DY-103816030
28	IDLER-L WASHER-B	DY-100646010	84	HANDLE WASHER	DY-100933010
29	BEARING PLATE	DY-104411020	85	HANDLE NUT	DY-104094090
30	E-RING	DY-100047010	86	HANDLE NUT RETAINER	DY-103642050
31	BEARING PLATE SCREW	DY-100028070	87	SCREW	DY-101202020
33	CLUTCH CAM	DY-102893010	88	SPOOL	DY-U05440010
34	CLUTCH SPRING	DY-102688010	88X	SPOOL COMPLETE	DY-105439010
35	KICK LEVER	DY-102307011	89	BALL BEARING	DY-100156010
36	KICK LEVER SPRING	DY-104137010	90	PIN	DY-104399010
37	CAM PLATE	DY-104354010	91	BRAKE HOLDER	DY-103670010
38	CAM PLATE SCREW	DY-101177050	92	BRAKE SHOE ASSEMBLY	DY-103272010
39	PINION YOKE	DY-102073010	94	BRAKE HOLDER PLATE	DY-103671010
40	PINION GEAR	DY-104368010	95	BRAKE HOLDER PLATE SCREW	DY-100526010
41	PINION YOKE SPRING	DY-102465010	96	PALM SIDE PLATE	DY-104406140
42	RATCHET	DY-100818020	96X	PALM SIDE PLATE ASSEMBLY	DY-U04352130
43	RATCHET WASHER	DY-103772010	98	CONTROL DIAL	DY-102917350
44	DRIVE GEAR	DY-102871020	99	SPOOL COVER	DY-102920010
45	DRAG WASHER-L	DY-102377011	105	SPOOL COVER SCREW	DY-100141010
46	DRAG WASHER-D1	DY-100057020	106	SPOOL SPACER-A	DY-101850010
47	DRAG WASHER-A	DY-100985010	107	BALL BEARING	DY-100155010
48	DRAG WASHER-D2	DY-104122010	108	BEARING RETAINER	DY-102976010
50	SLEEVE	DY-104537010	114	WASHER(OPTIONAL)	DY-100073011
51	GEAR SIDE PLATE	DY-104377250	116	CAM PLATE SCREW	DY-103013020
51X	GEAR SIDE PLATE ASSEMBLY	DY-U04351250	120	BRAKE PLATE HOLDER ASSEMBLY	DY-103274010
53	ONE WAY CLUTCH	DY-101515010	121	SLIDE CAM SPRING	DY-102665010
54	O-RING	DY-103165010	122	SLIDE CAM-H	DY-102395010
55	BALL BEARING	DY-102381010	123	SLIDE CAM SCREW	DY-100526020
56	BEARING RETAINER	DY-104461010	124	SLIDE CAM-D	DY-102394010
57	CAST CONTROL CAP	DY-103164250	125	CLICK SPRING	DY-102002010
57X	CAST CONTROL CAP ASSEMBLY	DY-U03164250	126	SPOOL COVER SPACER(OPTIONAL)	DY-102635020
58	CLICKER	DY-101674011	127	LINK PLATE	DY-102894010
59	CLICK PLATE	DY-101675011	128	LINK PLATE SCREW	DY-103014010
60	CLICK PLATE RETAINER	DY-101543012	133	HOOK HOLDER	DY-102898020
			134	HOOK HOLDER WASHER	DY-101168020
			135	HOOK HOLDER SCREW	DY-100246030
			136	HOOK HOLDER SPRING	DY-102968011
			155	BUSH	DY-104365010