

PT1SHG2

Key #	Description	Order ID #	Key #	Description	Order ID #
1	FRAME	DY-105520010	71	DRAG SPRING WASHER	DY-100088010
2	CLUTCH BAR PLATE-R	DY-104636010	73	STAR DRAG	DY-105564010
3	CLUTCH BAR PLATE-L	DY-104637010	74	CLICK LEAF SPRING	DY-102002010
4	CLUTCH BAR ASSEMBLY	DY-105530010	75	CLICK PLATE-B	DY-100188030
6	CLUTCH BAR SCREW	DY-104739020	77	HANDLE WASHER	DY-105565020
7	LEVEL WIND ASSEMBLY	DY-105527010	78	HANDLE	DY-U04105011
8	PIPE	DY-103286010	78X	HANDLE COMPLETE	DY-104104080
9	WORM SHAFT	DY-103287010	79	BALL BEARING	DY-102950010
10	BALL BEARING	DY-102954010	80	HANDLE KNOB	DY-104258040
12	IDLER-S	DY-100019010	81	BALL BEARING	DY-102950010
13	WORM SHAFT PIN	DY-100020010	82	HANDLE KNOB SCREW	DY-100180010
15	WORM SHAFT BUSHING-B	DY-104642010	83	HANDLE KNOB CAP	DY-104185110
16	WORM SHAFT WASHER	DY-100539010	84	HANDLE WASHER	DY-100933010
17	E-RING	DY-100047010	85	HANDLE NUT	DY-104094040
18	PILLAR	DY-102711020	86	HANDLE NUT RETAINER	DY-103642100
19	LEVEL WIND PIN	DY-100464011	87	SCREW	DY-101202030
49	SLEEVE WASHER(OPTIONAL)	DY-100086010	88	SPOOL	DY-U05547010
20	SPACER(OPTIONAL)	DY-100025010	88X	SPOOL COMPLETE	DY-105546010
21	LEVEL WIND NUT	DY-100288021	89	BALL BEARING	DY-100156010
22	FRONT COVER	DY-105525010	90	PIN	DY-104399010
23	FRONT COVER SCREW	DY-100152010	91	BRAKE HOLDER	DY-103670010
24	BALL BEARING	DY-102952010	92	BRAKE SHOE ASSEMBLY	DY-103272010
25	CRANK SHAFT	DY-105264010	94	BRAKE HOLDER PLATE	DY-103671010
27	IDLER-L	DY-101938020	95	BRAKE HOLDER PLATE SCREW	DY-100526010
28	IDLER-L WASHER-B	DY-100646020	96	PALM SIDE PLATE	DY-U05524010
29	BEARING PLATE	DY-104411020	96X	PALM SIDE PLATE ASSEMBLY	DY-UA5524010
30	E-RING	DY-100047010	98	CONTROL DIAL	DY-105538010
31	BEARING PLATE SCREW	DY-100028070	99	SPOOL COVER	DY-105535020
33	CLUTCH CAM	DY-104638010	105	SPOOL COVER SCREW	DY-103235040
34	CLUTCH SPRING	DY-102688010	106	SPOOL SPACER-A	DY-101850010
35	KICK LEVER	DY-102307011	107	BALL BEARING	DY-100155010
36	KICK LEVER SPRING	DY-104137010	108	BEARING RETAINER	DY-102976010
37	CAM PLATE	DY-104639010	114	WASHER(OPTIONAL)	DY-100073011
38	CAM PLATE SCREW	DY-100035050	117	CLUTCH WASHER	DY-100539030
39	PINION YOKE	DY-102073010	118	CLUTCH SCREW	DY-103013020
40	PINION GEAR	DY-104368010	120	BRAKE PLATE HOLDER ASSEMBLY	DY-105566010
41	PINION YOKE SPRING	DY-102465010	121	SLIDE CAM SPRING	DY-102665010
42	RATCHET	DY-100818020	122	SLIDE CAM-H	DY-105537010
43	RATCHET WASHER	DY-103772010	123	SLIDE CAM SCREW	DY-100526020
44	DRIVE GEAR	DY-102871020	125	CLICK SPRING	DY-105429010
45	DRAG WASHER-L	DY-102377011	126	SPOOL COVER SPACER(OPTIONAL)	DY-103567020
46	DRAG WASHER-D1	DY-100057020	133	HOOK HOLDER	DY-102898020
47	DRAG WASHER-A	DY-100985010	134	HOOK HOLDER WASHER	DY-101168020
48	DRAG WASHER-D2	DY-104122010	135	HOOK HOLDER SCREW	DY-100246030
50	SLEEVE	DY-104537010	136	HOOK HOLDER SPRING	DY-102968011
51	GEAR SIDE PLATE	DY-105522010	141	HOOD	DY-105521010
51X	GEAR SIDE PLATE ASSEMBLY	DY-U05522010	142	HOOD SCREW	DY-101177060
53	ONE WAY CLUTCH	DY-104088010	143	FRONT COVER SCREW-B	DY-101177060
54	O-RING	DY-104461010	144	LOCK LEVER	DY-105536010
55	BALL BEARING	DY-102381010	145	CLICK PIN SPRING	DY-103643010
57	CAST CONTROL CAP	DY-103164150	146	CLICK PIN	DY-102494011
57X	CAST CONTROL CAP ASSEMBLY	DY-U03164150	147	GUIDE PIN	DY-103288010
58	CLICKER	DY-101674011	155	BUSH	DY-104365010
59	CLICK PLATE	DY-101675011	166	WASHER (G/METAL E-RING-BALL BEARING)	DY-100647050
60	CLICK PLATE RETAINER	DY-101543012	169	CONTROL DIAL WASHER	DY-105055010
61	TENSION WASHER	DY-100073011	170	CONTROL DIAL SCREW	DY-103014010
62	SPOOL SPACER-B	DY-100074021	171	FRONT COVER TRIM	DY-105526010
66	GEAR SIDE COVER SCREW-A	DY-104086060	172	FRAME PLATE	DY-105529010
67	GEAR SIDE COVER SCREW-B	DY-100035070	173	CLUTCH BAR TRIM	DY-105532010
69	LUBE PORT CAP	DY-103305220	174	CLUTCH BAR TRIM SCREW	DY-100526010
70	LUBE PORT CAP SCREW	DY-101507040	175	GEAR SIDE TRIM SCREW	DY-100526010
			176	DRAG NUT	DY-105562010
			177	DRAG NUT WASHER	DY-105567010
			178	DRAG NUT SPRING	DY-105590010