



AH1SHG2

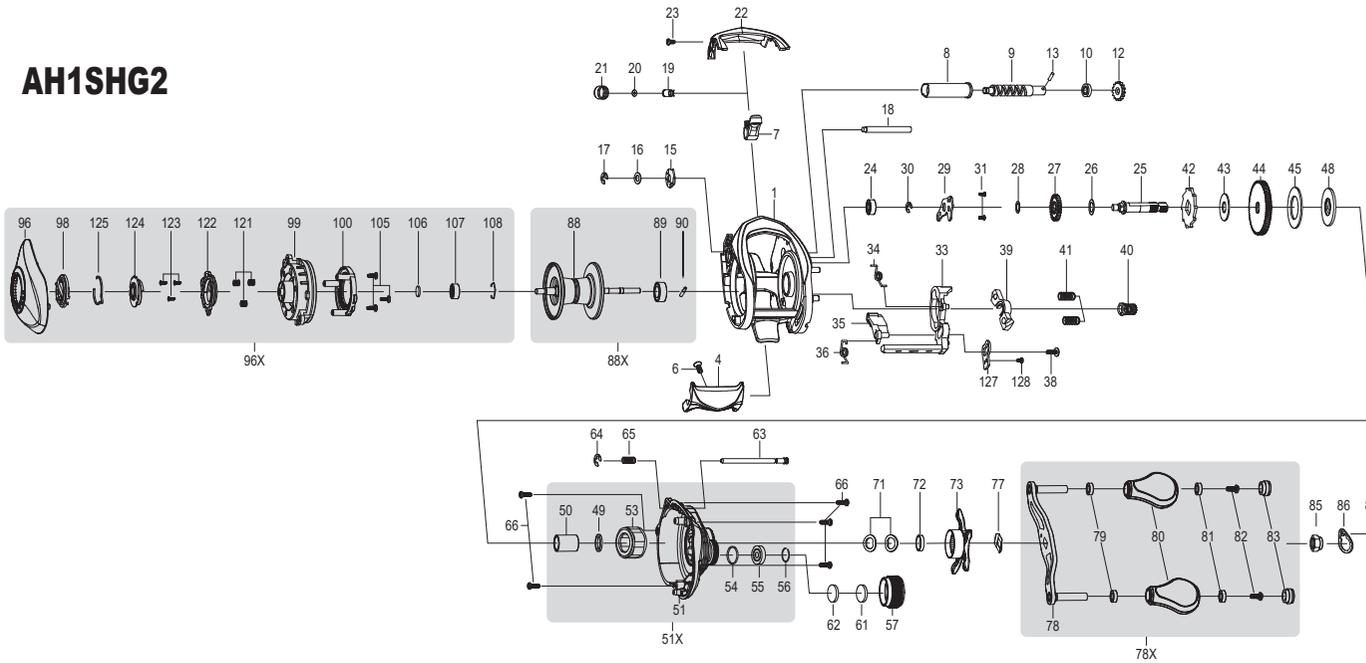

AH1SHLG2

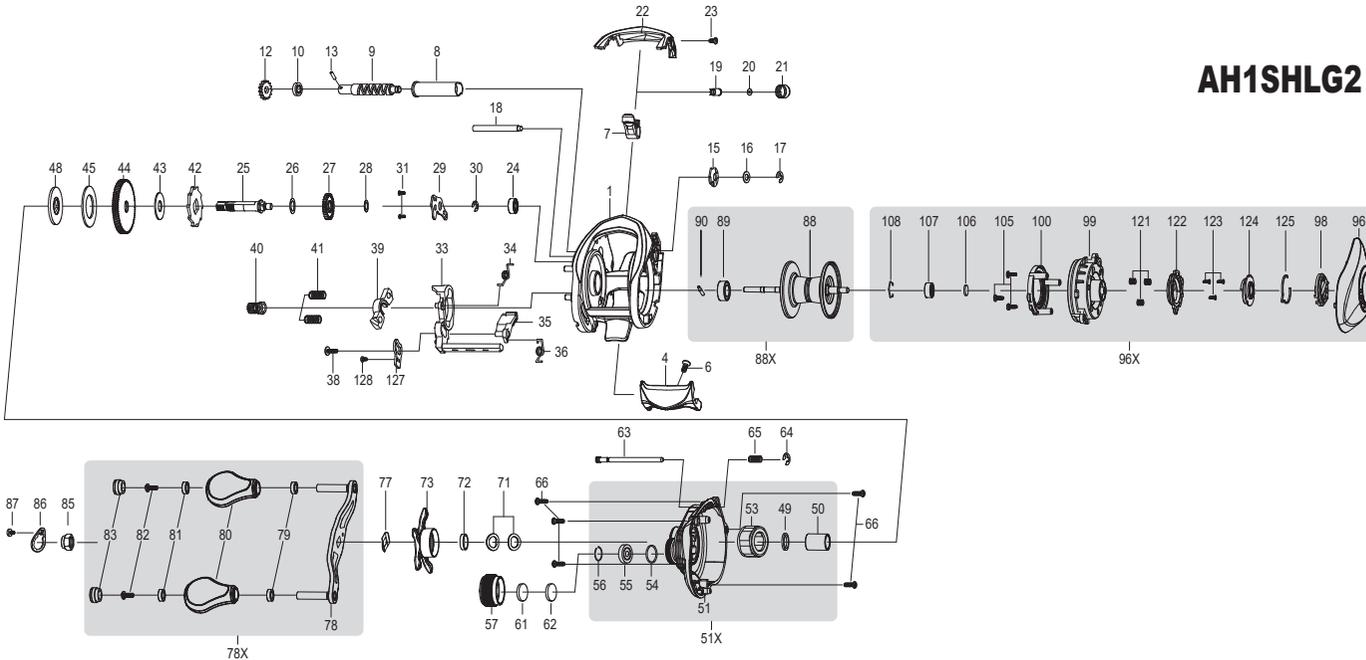

Key#	Part Name	Key#	Part Name	Key#	Part Name
1	FRAME	41	PINION YOKE SPRING	86	HANDLE NUT RETAINER
4	CLUTCH BAR	42	RATCHET	87	SCREW
6	CLUTCH BAR SCREW	43	RATCHET WASHER	88	SPOOL
7	LEVEL WIND ASSEMBLY	44	DRIVE GEAR	88X	SPOOL COMPLETE
8	PIPE	45	DRAG WASHER	89	BALL BEARING
9	WORM SHAFT	48	DRAG WASHER-D2	90	PIN
10	BALL BEARING	49	SLEEVE WASHER(OPTIONAL)	96	PALM SIDE PLATE
12	IDLER-S	50	SLEEVE	96X	PALM SIDE PLATE ASSEMBLY
13	WORM SHAFT PIN	51	GEAR SIDE PLATE	98	CONTROL DIAL
15	WORM SHAFT BUSHING-B	51X	GEAR SIDE PLATE ASSEMBLY	99	SPOOL COVER
16	WORM SHAFT WASHER	53	ONE WAY CLUTCH	100	MAGNET HOLDER ASSEMBLY
17	E-RING	54	O-RING	105	SPOOL COVER SCREW
18	PILLAR	55	BALL BEARING	106	SPOOL SPACER-A
19	LEVEL WIND PIN	56	BEARING RETAINER	107	BALL BEARING
20	SPACER(OPTIONAL)	57	CAST CONTROL CAP	108	BEARING RETAINER
21	LEVEL WIND NUT	61	TENSION WASHER	121	SLIDE CAM SPRING
22	FRONT COVER	62	SPOOL SPACER-B	122	SLIDE CAM-M
23	FRONT COVER SCREW	63	LOCKING PIN	123	SLIDE CAM SCREW
24	BALL BEARING	64	E-RING	124	DIAL PLATE
25	CRANK SHAFT	65	LOCKING PIN SPRING	125	CLICK SPRING
26	CRANK SHAFT WASHER (OPTIONAL)	66	GEAR SIDE COVER SCREW-A	127	LINK PLATE
27	IDLER-L	71	DRAG SPRING WASHER	128	LINK PLATE SCREW
28	IDLER-L WASHER-B	72	DRAG SPACER		
29	BEARING PLATE	73	STAR DRAG		
30	E-RING	77	LEAF SPRING		
31	BEARING PLATE SCREW	78	HANDLE		
33	CLUTCH CAM	78X	HANDLE COMPLETE		
34	CLUTCH SPRING	79	BUSHING		
35	KICK LEVER	80	HANDLE KNOB		
36	KICK LEVER SPRING	81	BUSHING		
38	CLUTCH CAM SCREW	82	HANDLE KNOB SCREW		
39	PINION YOKE	83	HANDLE KNOB CAP		
40	PINION GEAR	85	HANDLE NUT		