

AC1SHL

Key #	Description	Order ID #		Key #	Description	Order ID #
1	FRAME	DY-106270050		55	BALL BEARING	DY-104541010
4	CLUTCH BAR	DY-102707010		56	BEARING RETAINER	DY-101588011
6	CLUTCH BAR SCREW	DY-104739010		57	CAST CONTROL CAP	DY-106611010
7	LEVEL WIND ASSEMBLY	DY-103715070		57X	CAST CONTROL CAP ASSEMBLY	DY-U06611010
8	PIPE	DY-101406010		61	TENSION WASHER	DY-100834010
9	WORM SHAFT	DY-100017013		62	SPOOL SPACER-B	DY-100690010
10	BUSHING	DY-102605010		63	LOCKING PIN	DY-105916010
12	IDLER-S	DY-100019010		65	LOCKING PIN SPRING	DY-102665010
13	WORM SHAFT PIN	DY-100020010		66	GEAR SIDE COVER SCREW-A	DY-100202020
15	WORM SHAFT BUSHING-B	DY-104642010		71	DRAG SPRING WASHER	DY-100088010
16	WORM SHAFT WASHER	DY-100539020		73	STAR DRAG	DY-105837250
17	E-RING	DY-100047010		77	LEAF SPRING	DY-100101010
18	PILLAR	DY-102711010		78	HANDLE	DY-U06192020
19	LEVEL WIND PIN	DY-100464011		78X	HANDLE COMPLETE	DY-106191020
20	SPACER(OPTIONAL)	DY-100025020		79	BUSHING	DY-100196010
21	LEVEL WIND NUT	DY-100288021		80	HANDLE KNOB	DY-103135010
22	FRONT COVER	DY-106271060		81	BUSHING	DY-100196010
23	FRONT COVER SCREW	DY-100141020		82	HANDLE KNOB SCREW	DY-100180020
24	BALL BEARING	DY-104542010		83	HANDLE KNOB CAP	DY-103141010
25	CRANK SHAFT	DY-103144011		85	HANDLE NUT	DY-104096100
26	IDLER-L WASHER-A	DY-100647050		86	HANDLE NUT CAP	DY-102983010
27	IDLER-L	DY-101938020		87	SCREW	DY-101202020
28	IDLER-L WASHER-B	DY-100646020		88	SPOOL	DY-U06314060
29	BEARING PLATE	DY-104998010		88X	SPOOL COMPLETE	DY-106313060
30	E-RING	DY-100047010		89	BALL BEARING	DY-104540010
31	BEARING PLATE SCREW	DY-100135010		90	PIN	DY-100120010
33	CLUTCH CAM	DY-103585010		96	PALM SIDE PLATE	DY-106274060
34	CLUTCH SPRING	DY-102690010		96X	PALM SIDE PLATE ASSEMBLY	DY-U06274060
35	KICK LEVER	DY-102308011		98	CONTROL DIAL	DY-106269060
36	KICK LEVER SPRING	DY-104146010		99	SPOOL COVER	DY-106267010
39	PINION YOKE	DY-102083010		100	MAGNET HOLDER ASSEMBLY	DY-U06268020
40	PINION GEAR	DY-103620010		105	SPOOL COVER SCREW	DY-103423010
41	PINION YOKE SPRING	DY-102465010		106	SPOOL SPACER-A	DY-101850010
42	RATCHET	DY-101407010		107	BALL BEARING	DY-104541010
43	RATCHET WASHER	DY-103772010		108	BEARING RETAINER	DY-102976010
44	DRIVE GEAR	DY-102962010		112	DRAG SPACER	DY-100087010
45	DRAG WASHER-L	DY-101531030		118	CLUTCH SCREW	DY-100293010
48	DRAG WASHER-D2	DY-101367010		121	SLIDE CAM SPRING	DY-102665010
49	SLEEVE WASHER(OPTIONAL)	DY-100144020		122	SLIDE CAM-H	DY-105585010
50	SLEEVE	DY-104537010		123	SLIDE CAM SCREW	DY-100526030
51	GEAR SIDE PLATE	DY-106273060		125	CLICK SPRING	DY-105429010
51X	GEAR SIDE PLATE ASSEMBLY	DY-U06264060		148	WASHER(OPTIONAL)	DY-100086050
53	ONE WAY CLUTCH	DY-104088010		167	CONTROL DIAL SCREW	DY-104901010
54	O-RING	DY-100071020		168	CONTROL DIAL WASHER	DY-105055010